



CLEANING NOTICE

Prior to cleaning, remove Insight product from the weapon, and remove batteries from the Insight product. Periodically clean accessories to ensure proper working condition.

NOTE: Avoid submerging lights to prevent liquids from pooling in the electrical contact area.

WARNING: Do not use highly basic, acidic, or flammable cleaning compounds. Do not use ultrasonic cleaning methods.

EXTERIOR OF UNIT: Rinse with clean water or a mild soap and water solution, then wipe dry with a soft cloth. Standard gun cleaning solvents may be used to clean stubborn areas. Rinse with clean water to eliminate residue.

LENS: Clean with alcohol, clean water, or general purpose window cleaner.

ELECTRICAL CONTACTS: Clean the electrical contact (on rear cover, inside the unit, and on the bulb) with cotton swabs dipped in alcohol, or for heavier build-up use a standard pencil eraser (be sure to thoroughly remove eraser residue).

HELPFUL TIPS

- Keep silicone O-rings lubricated with a non-silicone, high temperature stable grease to ensure the cleanliness of the inside of the bezel.
- Rub a small amount of oil or lubricating solvent on the flashlight bezel lens (exterior only) prior to shooting to avoid muzzle blast build-up. This will make post-shooting clean-up easier.
- Do not over-tighten adjusters or set screws.
- Be sure to tightly fasten the bezel so that it doesn't loosen under weapon fire.
- For optimal performance, keep all contacts clean and dry.

If you have any questions, please contact a Customer Service Representative:



23 Industrial Drive, Londonderry, NH 03053

Phone: 877.744.4802 Fax: 603.668.1084

Email: service@insighttechgear.com

www.InsightTechGear.com